



NOTES:

1. DIMENSIONS SHOWN IN [] ARE IN INCHES
2. HOLES ARE FOR #8 FLAT HEAD WOOD SCREWS OR 4.5MM WOOD SCREWS.
3. SET NOMINAL POCKET DEPTH TO 14.0 MM. USE UP TO 14.2 MM FOR TIGHTER FIT; USE 13.8 MM FOR LOOSER FIT.

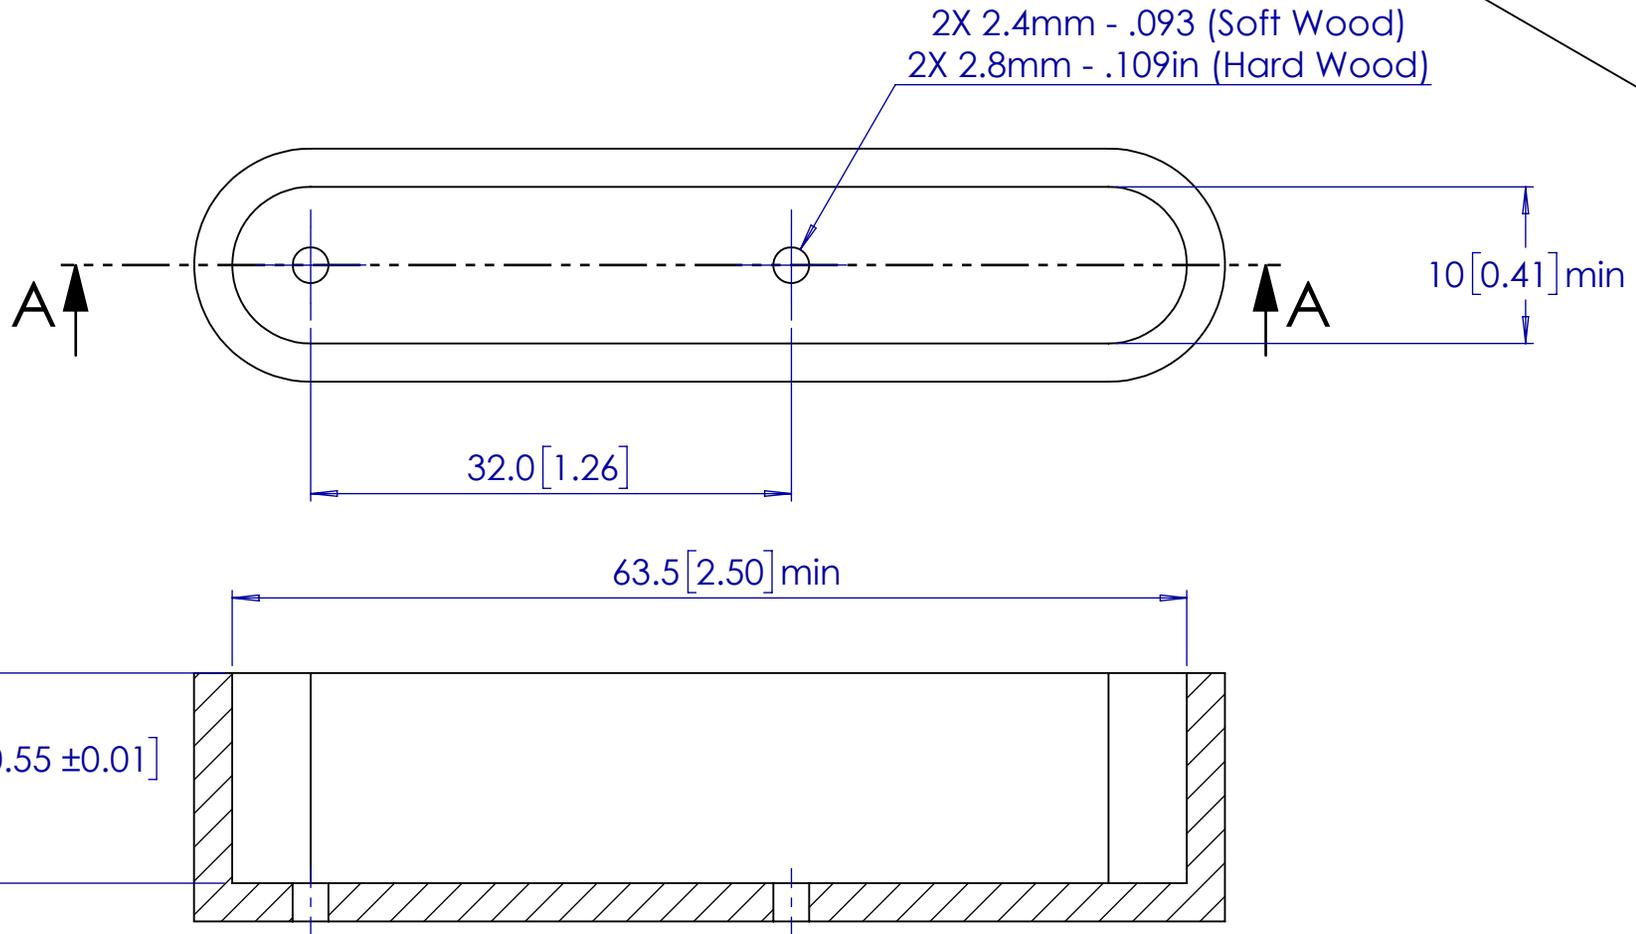

SECTION A-A


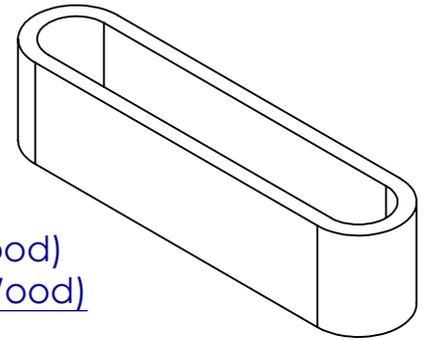


THIS DRAWING IS PROPERTY OF:
 KNAPP USA INC.
 12245 NATIONS FORD RD STE 403
 PINEVILLE, NC 28134
 WWW.KNAPPCONNECTORS.COM

MATERIAL			
PART NO.	PART NAME		
2070 SINGLE SERIES	CLOSED POCKET		
DRAWN BY	ISO NO	SCALE	REVISION
JAB		2:1	V01

NOTES:

1. DIMENSIONS SHOWN IN [] ARE IN INCHES
2. HOLES ARE FOR #6 FLAT HEAD WOOD SCREWS OR 3.5MM WOOD SCREWS.
3. SET NOMINAL POCKET DEPTH TO 14.0 MM.
USE UP TO 14.2 MM FOR TIGHTER FIT; USE 13.8 MM FOR LOOSER FIT.

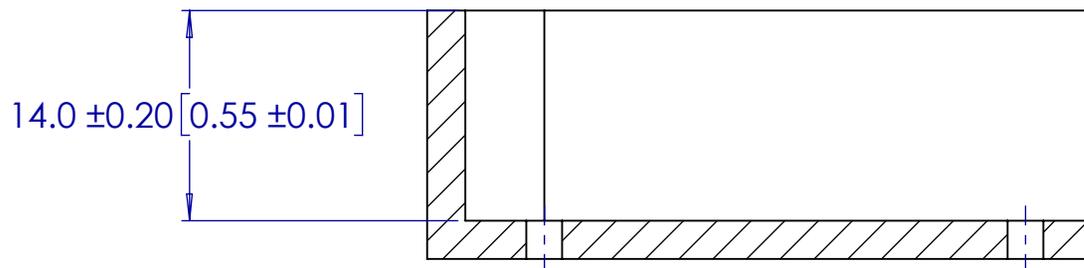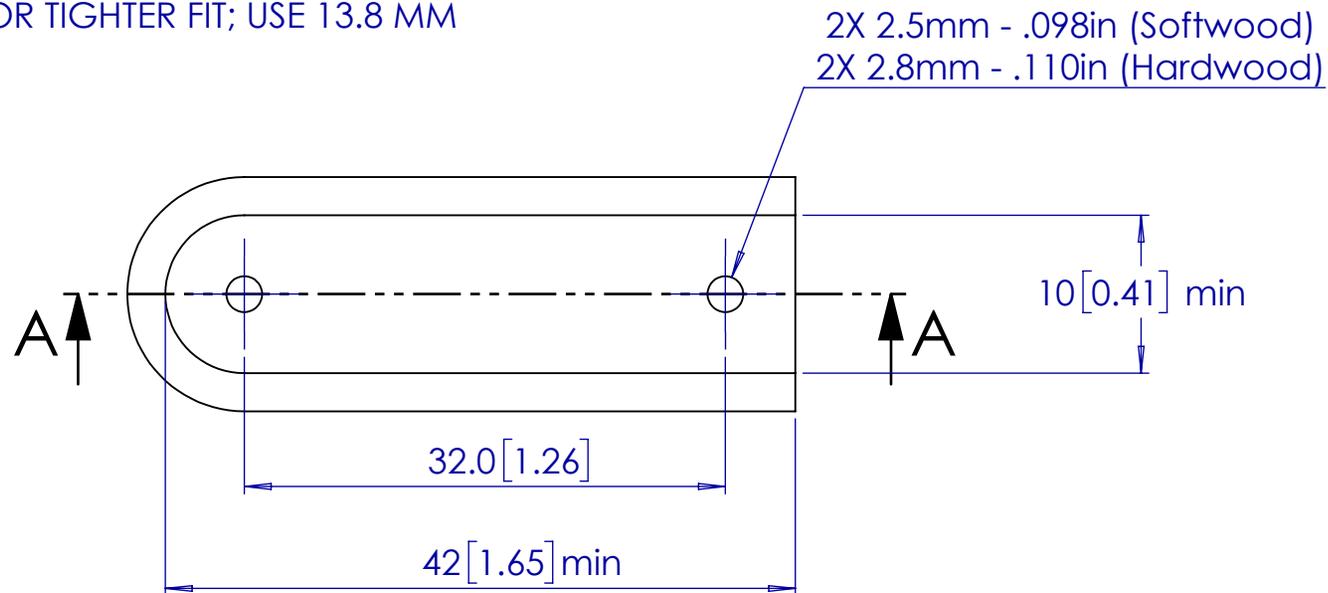

SECTION A-A



THIS DRAWING IS PROPERTY OF:
KNAPP USA INC.
12245 NATIONS FORD RD STE 403
PINEVILLE, NC 28134
WWW.KNAPPCONNECTORS.COM

MATERIAL			
PART NO. 2070 SERIES		PART NAME OPEN END POCKET	
DRAWN BY JAB	ISO NO	SCALE 2:1	REVISION V01